




1. Connect Center Spine as shown.

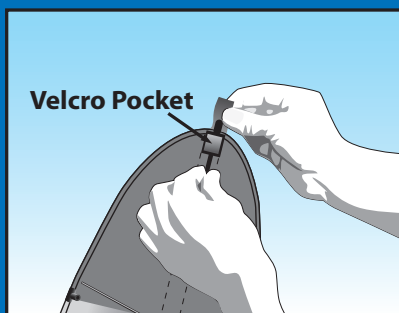


1. Fold over Velcro Pocket to secure.

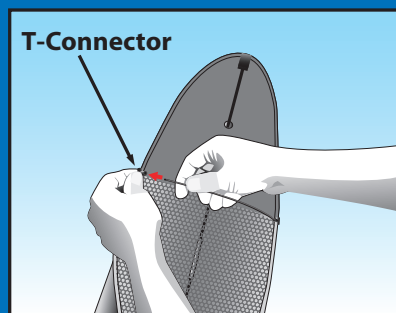


1. Insert Top Spreader into connector.

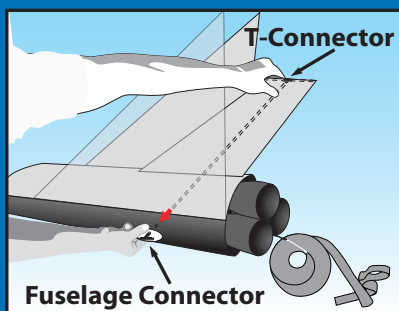



2. Insert Tail Wing Strut into fuselage connector.

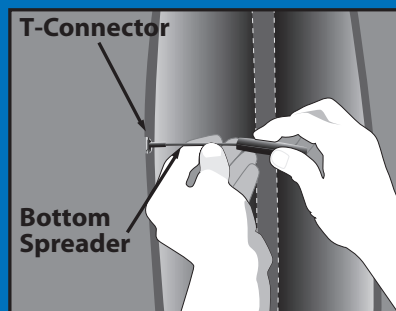

3. Insert left/right Bottom Spreaders into T-Connector.

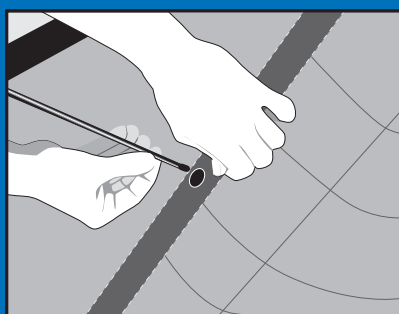

4. Insert Main Wing Spreader through fuselage and into Wing Pockets (left/right).
To disassemble, reverse assembly steps.

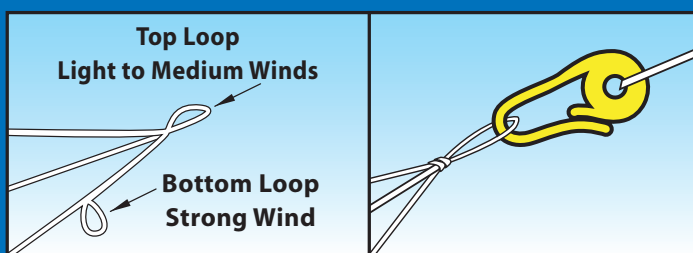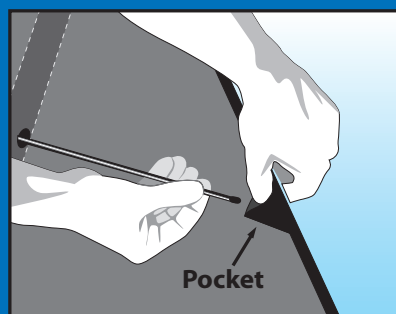

5. Attach the QuikClip® to the Bridle Loop. Top Loop for light to medium winds, Bottom Loop for strong wind.