




**1.** Connect Spine at Metal Connector.

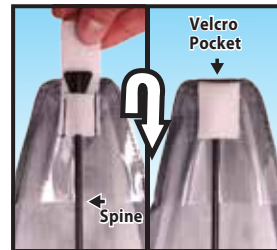


**2.** Push down Spine and secure Velcro Pocket.

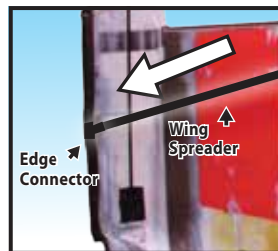


**3.** Insert Wing Spreader, left and right, into the Edge Connector.

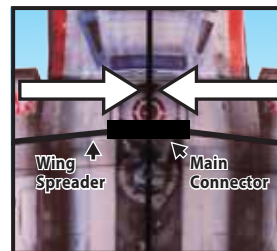

**4.** Insert Wing Spreaders, left and right, into the Main Connector.

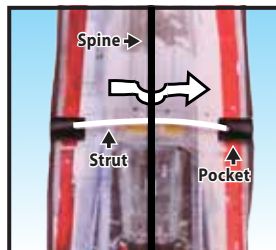

**5.** Pass Nose Strut under Spine and insert into Pocket.

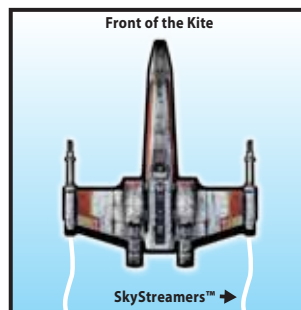

**6.** Unwind SkyStreamers™ and for more stability, tie them together.

**7.** Attach the QuikClip® to Bridle Loop. Top Loop for light to medium winds, Bottom Loop for strong winds.

