



- 1.** Insert Cross Supports into Wing Connectors.


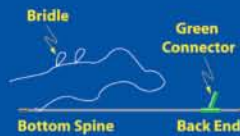


- 2.** Slide Bottom Spine (has Bridle attached) through Nose Opening. Be sure to insert back end first and under Blue Spreaders. Push in until end is even with the front.

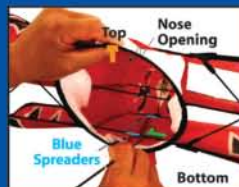


- 3.** Separate Velcro Opening near the bottom of the Tail Wing. Insert Vertical Tail Strut (Green) into Green Connector.

- 4.** Insert back end of Bottom Spine into Tail Pocket.

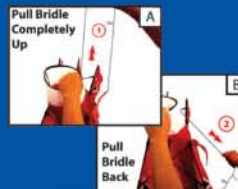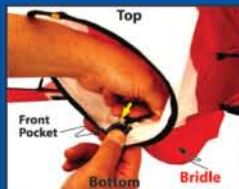


- 5.** Insert front end of Bottom Spine into Front Pocket (Black). Find end of Bridle on the Bottom Spine & slide toward the Front Pocket.

- 6.** Pull Bridle completely up & back. Re-check to see the Bridle is near the Front Pocket on the Bottom Spine.

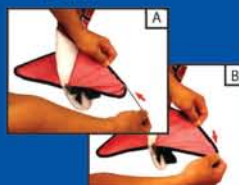


- 7.** Insert Tail Wing Frame completely into the sleeve (Inset A) then back into Corner Connector (Inset B).

- 8.** Insert Top Spine (Orange Rod) through Nose Opening and thread through Orange Guide Loop. This Rod must pass under Yellow Tail Wing Spreader.

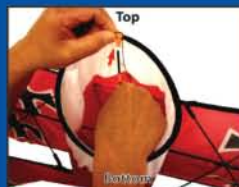

- 9.** Insert the end of the Top Spine (orange Rod) into Orange Connector on the Nose Opening.

- 10.** Reach through the Velcro Opening and insert end of Top Spine (Orange Rod) into Orange Connector.

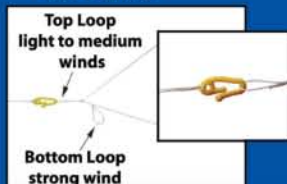

- 11.** Attach the QuikClip® to the Bridle Loop. Top Loop for light to medium winds, Bottom Loop for strong wind.